



NOTICE

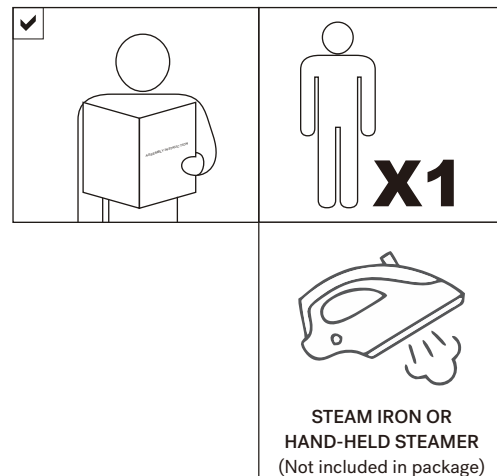


**! STEAM COVERS AFTER UNPACKING
AND FITTING TO REMOVE CREASES**

REMOVING COVER

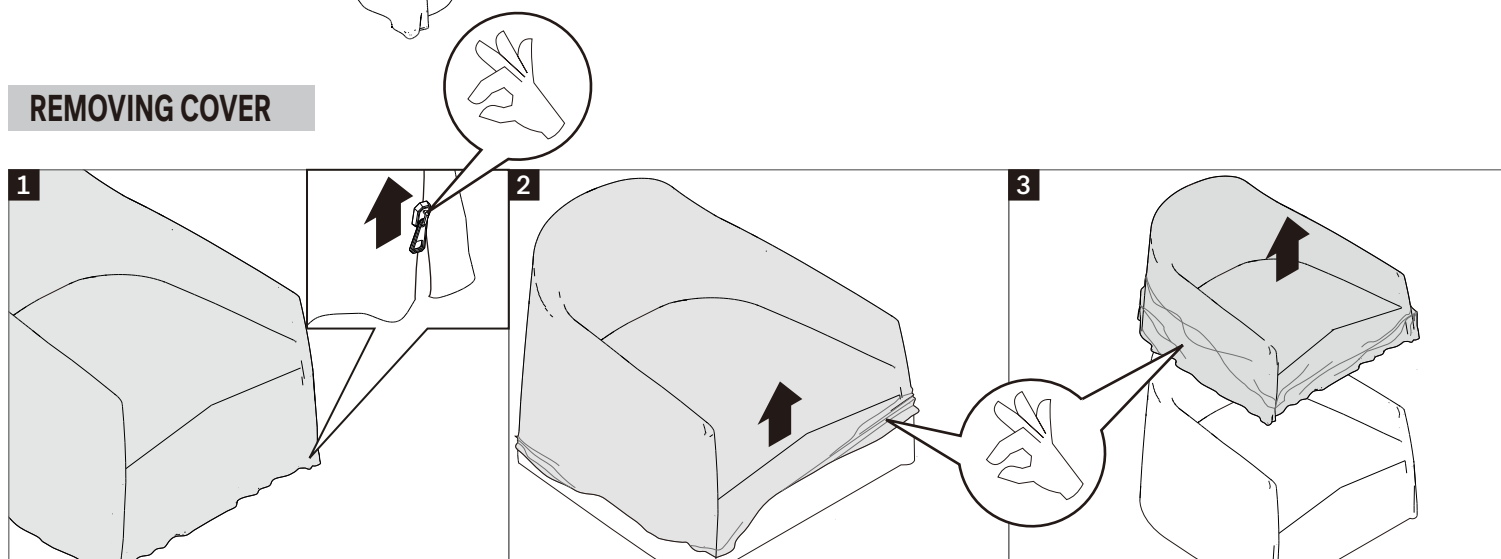

FITTING COVER

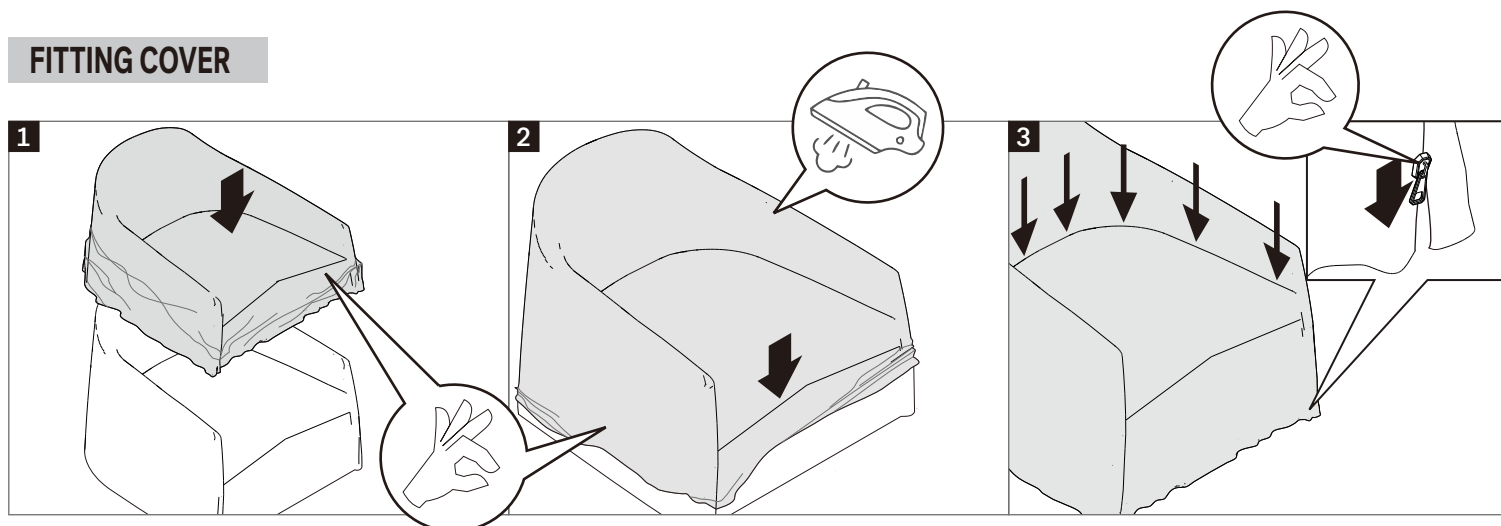

**! ENSURE THE FABRIC COVER IS WELL TUCKED
INTO THE FRAME'S CREVICES.**